

## GB

### A. "Door open" indication


This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

### B. "Service" indication

### C. "Water tap closed" indication

### D. "Clean pump" indication

## PROGRAMME CHART

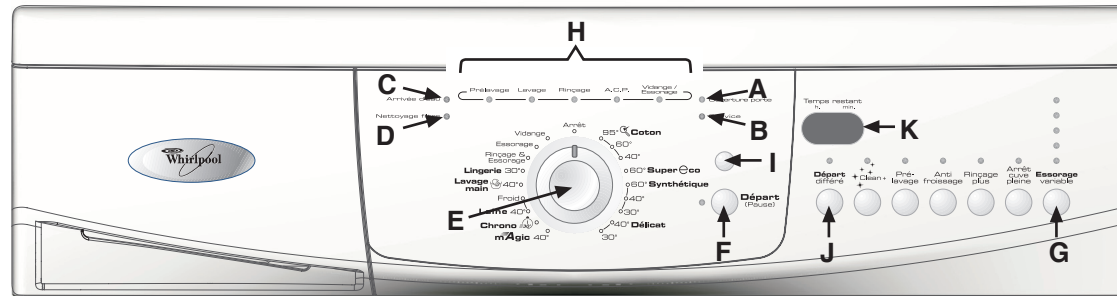

### E. Programme selector

### F. "Start/Pause" button







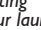










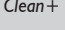




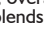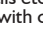


### G. Spin speed selector

### H. Programme sequence indicator
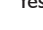
### I. "Reset" button

### J. "Start delay" button

### K. Time display

Programme		Care Labels	Max. Load  kg	Type of wash / Notes  - Respect the manufacturer's recommendations on the care label	Detergents and Additives			Special options							Max. Spin Speed  rpm
					Pre-wash 	Main Wash 	Softener 	Start delay <i>Départ différé</i>	Clean+ <i>Clean+</i>	Pre-wash <i>Pré-lavage</i>	Easy ironing <i>Anti froissage</i>	Intensive rinse <i>Rinçage plus</i>	Rinse hold <i>Arrêt cuve pleine</i>	Variable spin <i>Essorage variable</i>	
<b>Cotton</b> Antibacterial 95 °C	 <b>Coton</b> 95 °C	 	7.0	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. <i>Selecting "Cotton 95", this programme eliminates bacteria, ensuring sanitization of your laundry. The bacteria removal efficiency has been tested following a similar methodology to the NF EN 13697 standard of Nov. 2001.</i>	*	Yes	*	*	*	*	*	*	*	*	Max.
<b>Cotton</b> 40 - 60 °C	<b>Coton</b> 40 - 60 °C			Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. <i>Offers highest economy in energy consumption by prolonged washing duration. Ideal to be run overnight to additionally profit from the more favourable energy rates. To avoid noise of spinning at night, set spin speed to "0" and start spin programme in the morning, or define programme start with "Start delay" accordingly.</i>	–	Yes	*	*	–	–	–	*	*	*	Max
<b>Synthetics</b> 30 - 40 - 60 °C	<b>Synthétiques</b> 30 - 40 - 60 °C	   	3.0	Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	*	Yes	*	*	*	*	*	*	*	*	1000 <sup>1)</sup>
<b>Delicates</b> 30 - 40 °C	<b>Délicat</b> 30 - 40 °C	 	1.5	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	*	Yes	*	*	–	*	–	–	*	*	1000 <sup>1)</sup>
<b>Daily load</b> 40 °C	 <b>mAgic</b> 40 °C	   	4.0	Slightly to normally soiled textiles made of cotton and/or synthetics.	–	Yes	*	*	–	–	*	*	*	*	Max.
<b>Quick wash</b> 30 °C	<b>Chrono</b>  30 °C		4.0	Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	–	Yes	*	*	–	–	–	–	*	*	Max.
<b>Wool</b> Cold - 40 °C	<b>Wool</b> Froid - 40 °C		1.0	Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable.	–	Yes	*	*	–	–	–	–	*	*	1000 <sup>1)</sup>
<b>Handwash</b> 40 °C	<b>Lavage main</b> 		1.0	Textiles made of linen, silk, wool and viscose marked as “handwashable”.	–	Yes	*	*	–	–	–	–	*	*	400 <sup>1)</sup>
<b>Lingerie</b> 30 °C	<b>Lingerie</b> 30 °C	 	1.0	This cycle is particularly suitable to treat delicate lingerie (use of laundry net strongly recommended).	–	Yes	*	*	–	–	–	–	*	*	400 <sup>1)</sup>
<i>Rinse &amp; Spin</i>	<i>Rinçage &amp; Essorage</i>	–	7.0	<i>Same as the last rinse and the final spin in the “Cotton” programme.</i>	–	–	*	*	–	–	–	*	*	*	Max.
<i>Spin</i>	<i>Essorage</i>	–	7.0	<i>In this programme spinning is intensive. Same as the spin cycle in the “Cotton” programme.</i>	–	–	–	*	–	–	–	–	–	*	Max.
<i>Drain</i>	<i>Vidange</i>	–	–	<i>Water is drained only without any spinning. Alternative method of terminating programme after “Rinse hold”.</i>	–	–	–	*	–	–	–	–	–	–	–

\* : option / Yes : dosing required

<sup>1)</sup> For improved garment care spin speed is restricted in these programmes.

Whirlpool is a registered trademark of Whirlpool USA.

**5019 301 01147**



## CONSUMPTION DATA

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)*
Cotton/Antibacterial	95	7.0	74**	2.10	2:10
Cotton ***	60	7.0	54	1.19	2:20
Cotton	40	7.0	69	0.75	2:15
Super Eco	60	7.0	69	0.84	4:00
Synthetics	60	3.0	50**	0.80	1:35
Synthetics	40	3.0	46	0.50	1:20
Delicates	30	1.5	60	0.50	0:45
Daily load	40	4.0	45	0.50	1:00
Quick wash	30	4.0	45	0.40	0:30
Wool	40	1.0	60	0.50	0:45
Handwash	40	1.0	45	0.50	0:40
Lingerie	30	1.0	45	0.40	0:36

Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

\* The remaining time indicator can deviate from the values in the table, because it takes into account the household conditions applicable at that time.

\*\* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

\*\*\* Reference Programme for Energy Label.

## ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add detergents as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use.

1. Turn the **programme selector** to the desired programme and temperature.
2. The **time display** shows the duration of the chosen programme (in hours and minutes), and the **"Start/Pause"** indication lamp blinks.
3. The **indication lamp** of the predefined spin speed lights up.

## SELECT ANY DESIRED OPTION

Push the button(s) of any option(s) desired - the respective indication lamp lights up. When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

### "Clean+" button

- Choose this option if you use an in-wash additive for stain removal (powder, for example "Vanish") - it will optimize the additive's efficiency to get better wash performance and stain removal.
- Selectable for programmes "Cotton" and "Synthetics"; choose temperature of 30 or 40°C and use with maximum load.
- Add an appropriate amount of in-wash additive for stain removal (powder) to the main wash chamber, together with your detergent (only use powder detergent with this option). Respect the manufacturer's dosing instructions.
- Prolongs the programme by approx. 10 to 15 minutes.

- Appropriate for use of stain removers and bleaches on oxygen basis. **Chlorine or perborate bleaches must not be used!**

### "Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. Increases the cycle time by approximately 15 min.
- Do not use liquid detergent for the main wash when activating the Prewash option.

### "Easy ironing" button

- Can be used together with "Cotton", "Synthetics" and "Daily load" programmes to make ironing easier.
- Increases the water quantity and the clothes are spun very gently.

### "Intensive rinse" button

- More water is added and rinse cycle is prolonged.
- This option is particularly suitable for areas with very soft water, washing baby linen and helps people with allergies.

### "Rinse hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the programmes "Synthetics", "Daily load" and "Delicates".
- This function is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

**Note:** The programme stops to "Rinse hold" at the time the "Rinse hold" light in the programme sequence indicator is on. The indication lamp next to the **"Start/Pause"** button blinks.

- If you select "Rinse Hold" do not leave items to soak for too long.

### Terminate the "Rinse hold" option:

- Press the **"Start/Pause"** button; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme selector knob to the "Drain" programme and press the **"Start/Pause"** button.

### "Variable spin" button

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during the rinse. The water is drained out only.

## START DELAY

The "Start delay" allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper. Do not use liquid detergent when activating the Start delay.

- Select programme, temperature and options.
- Press the "Start delay" button to select the delay time by 1 to 23 hours.
- Press the **"Start/Pause"** button. The countdown of the delay time begins; the "Start delay" indication lamp and the dot on the display will keep blinking until the programme starts
- The time delay indication disappears when the programme starts and it is replaced by the remaining programme time.
- Once having pressed the **"Start/Pause"** button, the number of hours preselected can be reduced by pressing again the "Start delay" button.
- Do not use liquid detergent when activating the Start delay.

### To cancel the "Start delay"

#### ..before you press the "Start/Pause" button:

- Turn the programme selector to another position or press the **"Reset"** button.

#### ..after having pressed the "Start/Pause" button:

- Press the "Reset" button for at least 3 second - the start delay time disappears from the time display.

## PROGRAMME START

Open the tap and press the **"Start/Pause"** button. The indication lamp next to the **"Start/Pause"** button lights up. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain.

The time display shows the remaining time programme time. Due to variations in load and temperature of inlet water, the remaining time is newly calculated in certain programme phases. If this is the case, an animation appears on the time display.

## "DOOR OPEN" INDICATION

Before starting and after end of a programme, the lamp lights to show the the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel (Reset) a running programme before the end".

## RED INDICATIONS

### "Service"

Lighting up of the "Service" indication can be caused by a fault in an electrical component. Refer to the "Troubleshooting Guide" in your "Instructions for Use"; if the fault persists, contact our After Sales Service.

### "Water tap closed"

The appliance has no or insufficient water supply. Open the water tap: if the indications still lights up, refer to the "Troubleshooting Guide" in the Instructions for Use.

### "Clean pump"

Waste water is not pumped out. Check whether the drain hose is kinked or the filter must be cleaned: in the latter case refer to the Instructions for Use ("Removing the Filter").

## PROGRAMME END

- All the lights of the programme sequence indicator are off, and the "Door open" indication lights up.
  1. Turn the programme selector to the "Off/O" position.
  2. Close the water tap.
  3. Open the door and unload the machine.
  4. Leave the door ajar to allow the drum to dry.

## CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the **"Start/Pause"** button to pause the programme. The light flashes.
2. Select the new programme (with temperature), any options and another spin speed if you want.
3. Press the **"Start/Pause"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

## CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END

The **"Reset"** button cancels a programme before the end.

- Press the **"Reset"** button for at least 3 seconds. Any existing water is drained out before the door can be opened.